**Tools**

- Phillips screwdriver
- Drill with Phillips bit

Hardware

- Z Clips
- #8 x 5/8" screws (not provided)
- 1x4 furring strips (not provided)
- Spacers
- Blocking or trim (not provided)

Instructions


1. Prior to installation please check and verify that all required components have been received.
2. Make sure to have enough hardware to complete the job — supplied and not supplied.
3. For most applications, it is common to paint the ceiling to similarly match the species and stain of the Aoudi planks.
4. Install 1x4 furring strips on 2' centers perpendicularly to the planned direction of the planks.

Tools

- Phillips screwdriver
- Drill with Phillips bit

Hardware

- Z Clips
- #8 x 5/8" screws (not provided)
- 1x4 furring strips (not provided)
- Spacers
- Blocking or trim (not provided)

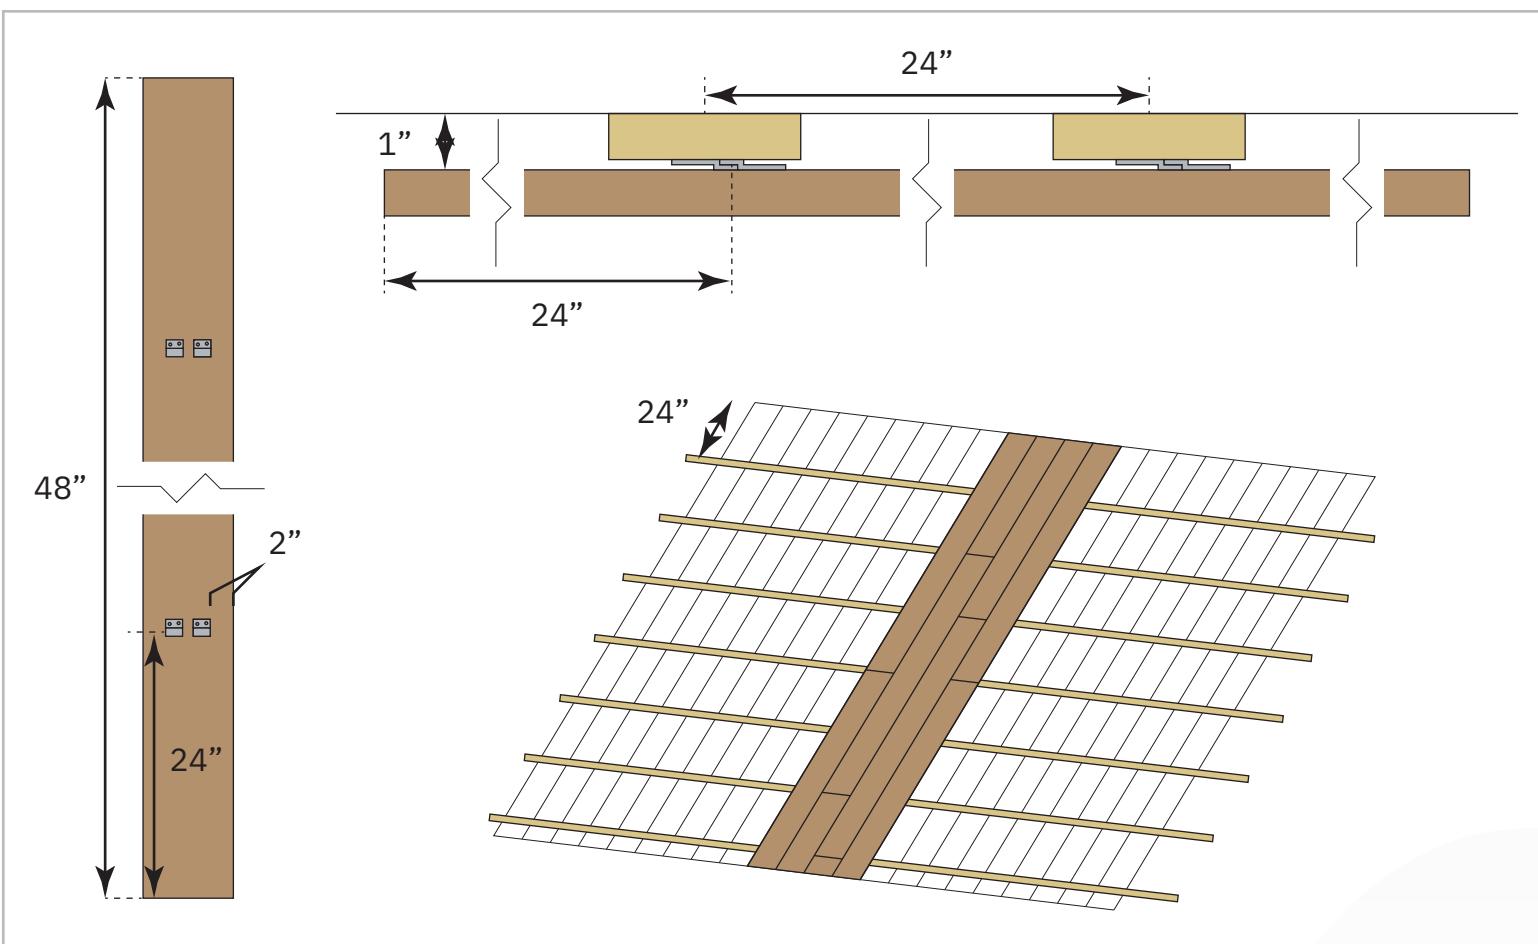

Instructions

5. Screw in four Z Clips to the backside of each plank 2' from the ends and 2" from the edge, on the resign spots, as shown above.
6. Install Z Clips on furring strips. Z Bar may be faster and easier for certain applications.
7. Slide planks onto furring Z Clips. Use provided spacers on the sides of each plank to provide even reveal.
8. Once ceiling installation is complete, blocking or trim around perimeter is required to secure planks in place. Blocking and trim is provided by the installer.

If installing wall to wall, there will be a 1.5" reveal between the plank and the wall to accommodate Z Clip installation