

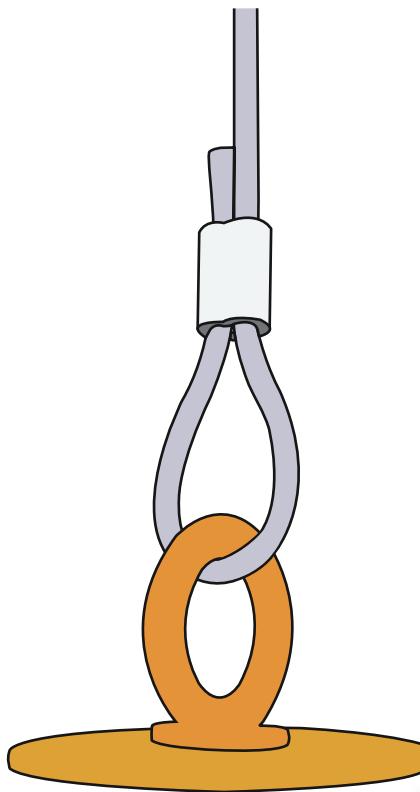
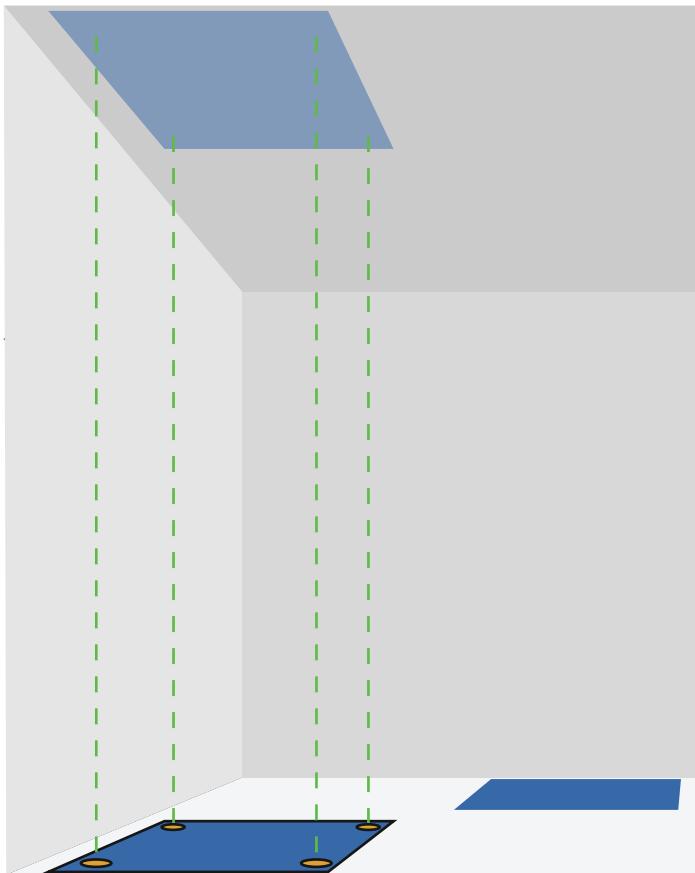
Tools

Varied based on ceiling application. Common tools include:

- Ferrule coupler pliers
- Driller
- Screwdriver
- Laser
- Tape measure

Hardware

- Rotofast Cloud Anchors (preinstalled)
- Rotofast Cloud Anchor Eyelets
- Cable Ferrules (provided by installer unless requested)
- Cables (provided by installer unless requested)
- Additional Ceiling Hardware (provided by installer unless requested)

**Instructions**

1. Spread clean paper or plastic covering onto the floor.
2. Remove panels from the crating and arrange cloud panels onto the floor face down.
3. Mark your ceiling in accordance with the measurements of the anchors on the back of the panel.
4. (Not shown in diagram)
5. Install ceiling hardware.
6. Install Rotofast Eyelets into Rotofast Anchors on panels.
7. Using aircraft wire or other suspension cables, install and adjust to desired height and level.

Tools

Varied based on ceiling application. Common tools include:

- Ferrule coupler pliers
- Driller
- Screwdriver
- Laser
- Tape measure

Hardware

- Rotofast Cloud Anchors (preinstalled)
- Rotofast Cloud Anchor Eyelets
- Cable Ferrules (provided by installer unless requested)
- Cables (provided by installer unless requested)
- Additional Ceiling Hardware (provided by installer unless requested)

Instructions

Notes

If the cloud has a white scrim back, cut a small slot into scrim to start anchor through – only if anchors are not preinstalled.

Each Rotofast Anchor will hold up to 43 lbs. Each square foot of panel weighs approximately 1 lb for 1".

